

C-Lion Tile Cutter



Product Video



PL Instrukcje



1. Safety Warnings

⚠ Caution

Read all safety instructions and warnings provided with power tool. Failure to follow the instructions below may result in serious injury


Keep all warnings and instructions for future reference.

2. Application


Size (mm)	⌀ (mm)	▭ (mm)	◊ (mm)	◊ (mm)
600	22 X 3 X 5	600	424 X 424	3-18
800	22 X 3 X 5	800	560 X 560	3-18
1000	22 X 3 X 5	1000	700 X 700	3-18
1200	22 X 3 X 5	1200	850 X 850	3-18
1200-Plus	22 X 3 X 5	1200	850 X 850	3-20

- Suitable for cutting all kinds of ceramic tiles, such as wall tiles, polished tiles and polished glazed tiles.

3. Assembly Instructions

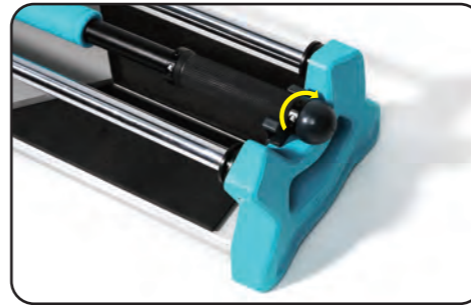


3.1 Screw to loose the ball cap, take out the scoring cutting wheel

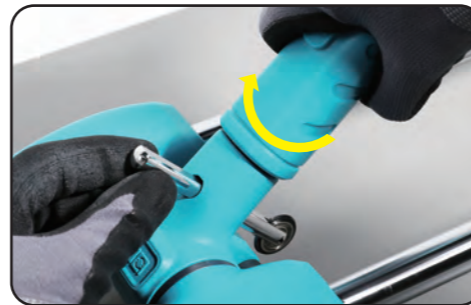

3.2 Loose the handle and put in the cutting wheel then fasten the handle, choose 4 for cutting 4mm tiles, choose 10 for cutting 10mm tiles etc..

3.3 Fix the Straight and Swiveling Guide with two bolts and adjust the side ruler to the required angle

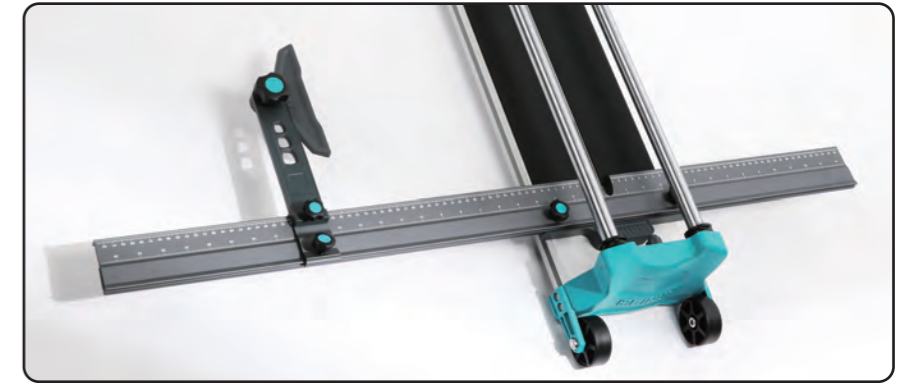





4. Using Instructions

- Lines must be cut continuous and clear.
- Always draw a line on the tile surface first before cutting.
- Just apply a little pressure on the tile so the cut will be smooth and flat.
- Don't exert too much pressure when cutting because it may cause uneven tile cuts and damage to the cutter's blade.



4.1 Cutting thickness engraved on the cutting wheel. choose 4 for cutting 4mm tiles, choose 10 for cutting 10mm tiles etc..




90° Cutting

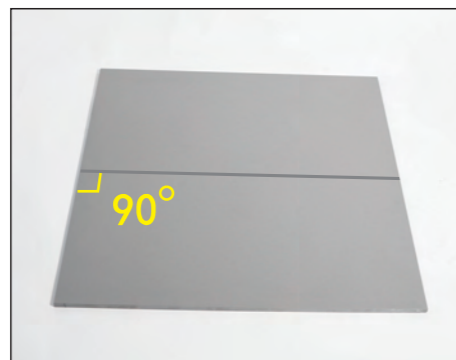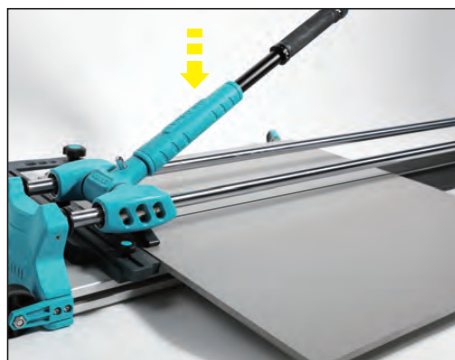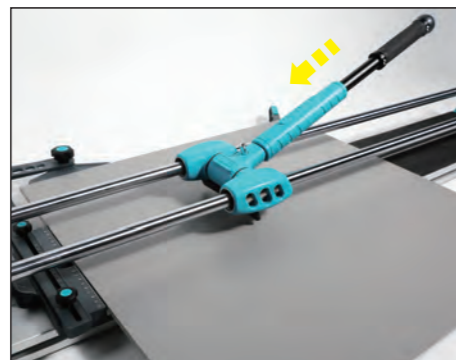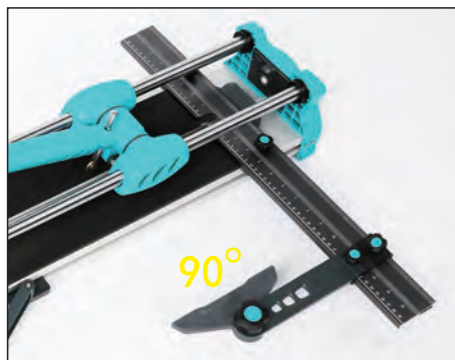


45° Cutting

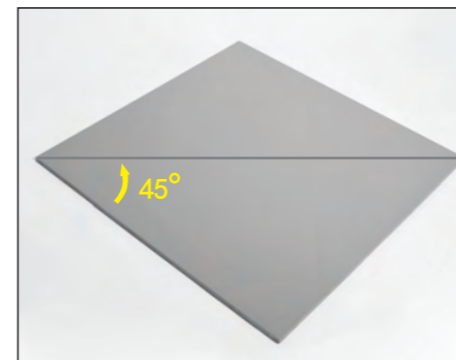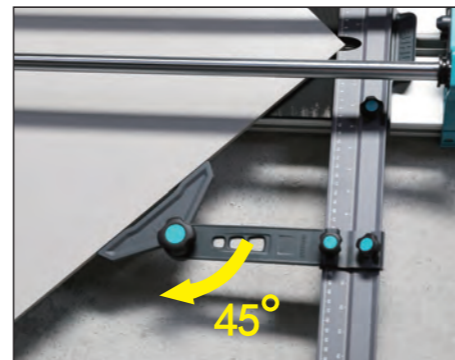

- LED light for dark working environment(600mm excl.)
- Laser for precise cutting(600mm excl.)

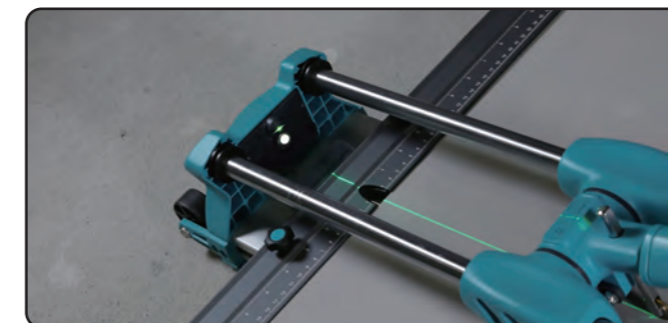

- Extend Inclined Bracing 2pcs for 600mm, 800mm and 1000mm, 4pcs for 1200mm.
- Professional 1M ruler for 800mm, 1000mm and 1200mm, 60cm ruler for 600mm.
- Transport wheels available for 1000mm and 1200mm.

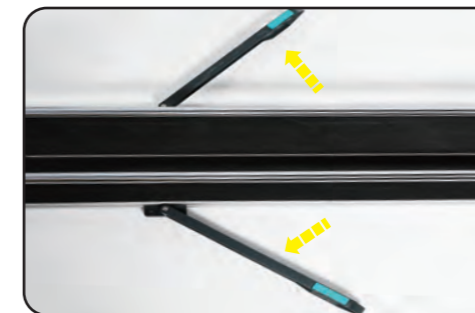

5. Cleaning and Maintenance

- Remove any dirt or residue from the tile cutter
- Replace the scoring cutting wheel if it was worn
- Change the batteries if LED & Laser is not working

6. Warranty

- The guarantee covers all manufacturing or assembly defects in accordance with the legislation in force. The guarantee does not cover malfunctions caused by improper use, overloads, failure to follow the operating instructions and normal wear and tear.
- For more details and information, consult the general guarantee conditions at www.bihuitools.com