



Spare Part List

| | | | |
|----|-------------------------------------|----|--------------------------|
| 1 | Cutting motor | 18 | Work table |
| 2 | Cutting disk | 19 | Trough |
| 3 | Control panel | 20 | Water pump |
| 4 | Synchronous pulley adjusting screws | 21 | Auxiliary table beam |
| 5 | Angle setting handle | 22 | Support columns |
| 6 | Beam fixing splint | 23 | Adjusting feet |
| 7 | Angle setting shaft | 24 | Auxiliary table beam |
| 8 | Wheel | 25 | Support columns |
| 9 | Foldable supporting legs | 26 | Adjusting feet |
| 10 | Anti-slip rubber | 27 | Synchronous pulley |
| 11 | Drag chain | 28 | Belt motor |
| 12 | Drag chain bracket | 29 | Angle setting handle |
| 13 | Synchronous belt | 30 | Angle setting shaft |
| 14 | Linear guide | 31 | Laser light |
| 15 | Cutting guide rail | 32 | Wheel |
| 16 | Position sensing magnet | 33 | Foldable supporting legs |
| 17 | Vacuum slot | 34 | Anti-slip rubber |

Control Panel

| | | | |
|---|-----------------------------------|---|------------------------|
| a | Water pump | e | Start/Stop |
| b | Semi-Auto | f | Speed+ |
| c | Speed- | g | Semi-Auto & Start/Stop |
| d | Main Switch/Emergency stop switch | h | Laser |