
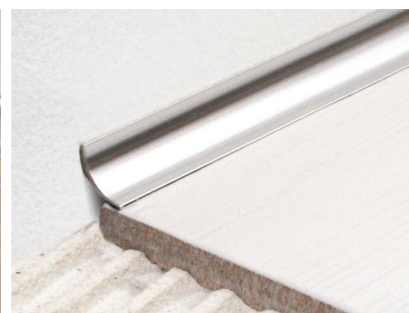
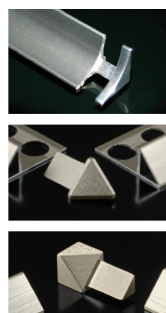
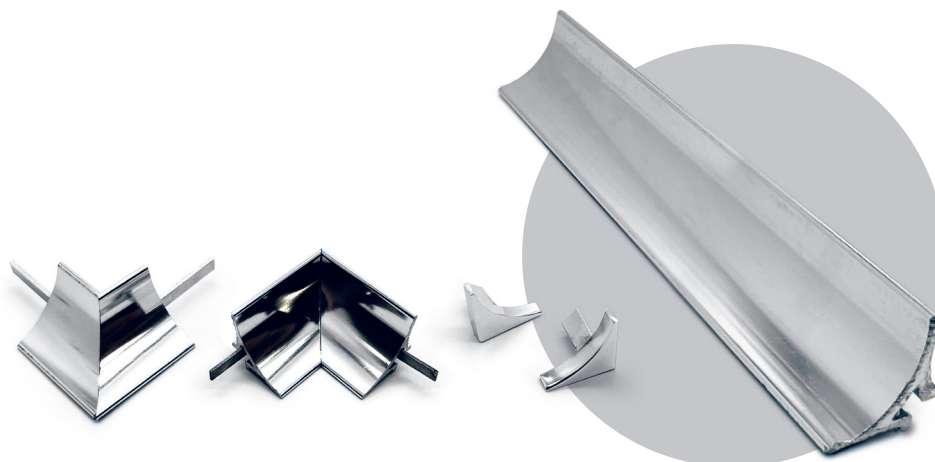


EWA

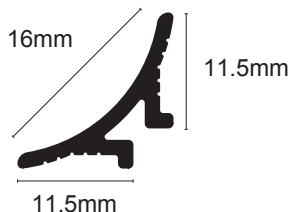

Product Description

EWA applied retrospectively secured into position with the pre-bonded adhesive tape, simply remove the carrier and apply to the prepared area. Ideal not only for internal corners but also floor and worktop applications, a range of complimentary accessories complete the perfect finish.

Technical Details

Profiles are available in different anodised finishes and powder coated finishes - All natural Aluminium (Mill Finish) has a oxide film of approx. 0.2 microns, when Mechanically and Chemically polished the anodising process increases this to 5 microns, up-to 20 for the Matt finish and 100 for powder coated.

Aluminium AA 6063 T6 / UNS A96063 anodised to DIN 17611

Si%	0.2-0.6
Fe%	0.35
Cu%	0.1
Mn%	0.1
Mg%	0.45-0.9
Zn%	0.1
Cr%	<0.01
Al	Balance

Maintenance

These profiles do not require any special maintenance, any oxidation that develops on aluminium surfaces can be removed although they may recur naturally over time. This oxidation can be removed using a standard aluminium polishing agent, however, damage to an anodised finish, such as scratching, or cementitious chemical reaction can only be restored by recoating.

To preserve the appearance and performance of the profile, promptly remove any adhesive, mortar, cement, or grout residue from visible surfaces. When exposed to moisture, cement-based materials become alkaline and may cause corrosion of aluminium if left in contact for extended periods. Ensure the profile is fully embedded in the setting material and that all voids are completely filled to prevent the accumulation of alkaline water.

To maintain and protect the surface, clean only with colorless alcohol diluted in water or pH-neutral detergents. Avoid acidic cleaners, such as hydrochloric or hydrofluoric acid, as they can cause damage. Use only soft, non-abrasive cloths or sponges, and apply cleaning solutions to the cloth rather than directly onto the surface. After cleaning, rinse thoroughly with water and dry immediately using a soft cloth.

External Use

We recommend powdercoated finishes are installed externally.

Dimensions

Available in 2.5m lengths

Installation

1. Ensure that the surface where the EWA profile is being applied is smooth, dry and free from any contaminants such as loose paint, dust and grease.
2. Remove the backing from the self adhesive strip.
3. Carefully place the EWA profile into position and apply an even pressure over the entire surface of the profile until a satisfactory lie is achieved.
4. Remove the protective film from the surface of the profile.

Allied Products

EWA profiles have specially designed external corner pieces EWE and internal corner pieces EWI designed to provide a perfect safe edge when mitring, and end caps EWC, to achieve a neat finish on visible ends.