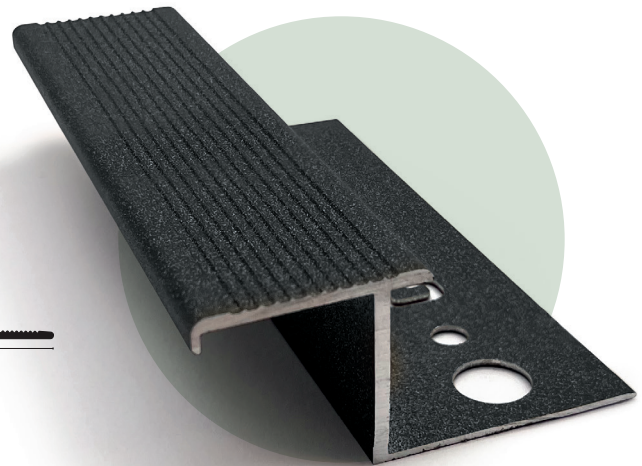
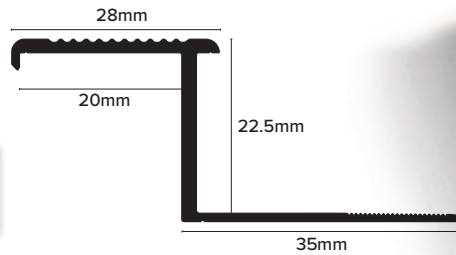





NLT17
Matt Black81
Matt Silver411
Granite414
Bath Stone425
Sand Stone435
Dark Granite

Product Description

For elevated spaces or steps in your outdoor area the Aluminium Tile-In Step Edge profile is a perfect solution. The simple innovative design provides a safe and secure grooved edge to step on as well as protecting the riser tile edge and preventing water ingress into the joint gap.

We offer bespoke Powder Coating to match any colour you may need.

Technical Details

NLT profiles are available in different anodised finishes and powder coated finishes - All natural Aluminium (Mill Finish) has a oxide film of approx 0.2 microns, when Mechanically & Chemically polished the anodising process increases this to 5 microns, up-to 20 for the Matt finish and 100 for powder coated.

Aluminium AA 6063 T6 / UNS A96063 anodised to DIN 17611

Si%	0.2-0.6
Fe%	0.35
Cu%	0.1
Mn%	0.1
Mg%	0.45-0.9
Zn%	0.1
Cr%	<0.01
Al	Balance

Maintenance

These profiles do not require any special maintenance, any oxidation that develops on aluminium surfaces can be removed although they may recur naturally over time. This oxidation can be removed using a standard aluminium polishing agent, however, damage to an anodised finish, such as scratching, or cementitious chemical reaction can only be restored by recoating..

To preserve the appearance and performance of the profile, promptly remove any adhesive, mortar, cement, or grout residue from visible surfaces. When exposed to moisture, cement-based materials become alkaline and may cause corrosion of aluminium if left in contact for extended periods. Ensure the profile is fully embedded in the setting material and that all voids are completely filled to prevent the accumulation of alkaline water.

To maintain and protect the surface, clean only with colorless alcohol diluted in water or pH-neutral detergents. Avoid acidic cleaners, such as hydrochloric or hydrofluoric acid, as they can cause damage. Use only soft, non-abrasive cloths or sponges, and apply cleaning solutions to the cloth rather than directly onto the surface. After cleaning, rinse thoroughly with water and dry immediately using a soft cloth.

Dimensions

Available in 2.8m lengths.

22.5mm depth with step tread of 28mm (W).

Installation

When installing with Tile Adhesive this should offer adequate fixing, however, if required most tile in nosings offer a mechanic fixing method using 5mm holes within the flange making them suitable for Wood and Laminate floors that do not require Tile adhesive.

1. Check the fit of the nosing and ensure the profile is the correct height and width for the step and floorcovering.
2. Install the floorcovering on the riser.
3. Place the nosing firmly on the step and if necessary mark the floor.
4. Drill and Plug the floor if Mechanically fixing.
5. Apply the adhesive using a suitable notched trowel to the manufacturers recommendations.
6. Bed the profile into the adhesive ensuring that the adhesive comes through all the flange holes, spread the adhesive over the top of the flange before installing tiles.
7. A grout gap is not required however if visible ensure that grout is compressed firmly within the gap.