
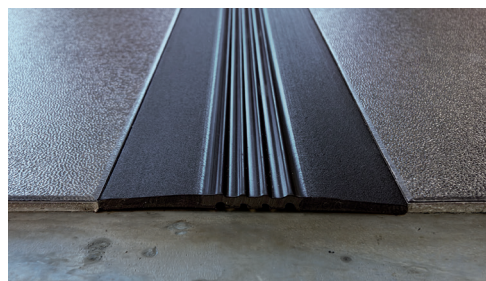
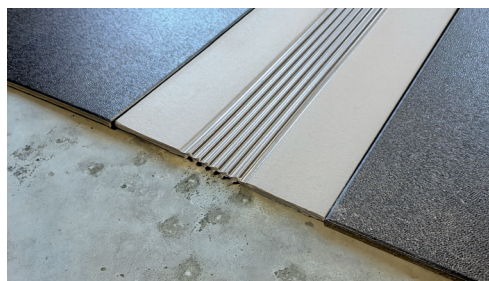
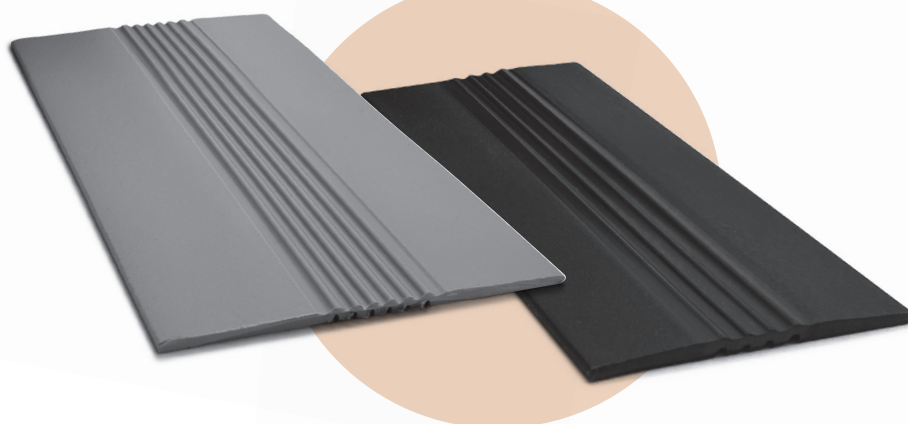


MVP

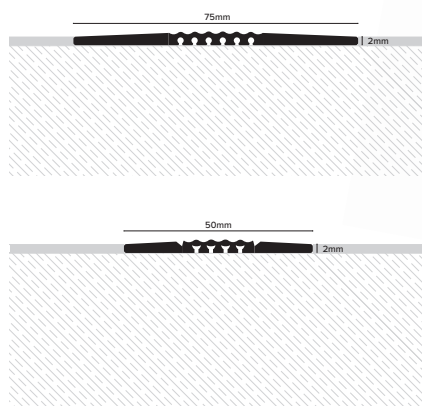

Product Description

MVP from Genesis is a flexible PVC transition profile that bridges resilient floor coverings and delivers a neat, clean finish.

Dimensions

At a 2.5mm height, it is available in both 50mm and 75mm widths and is supplied on 15m coils.

Technical Details

MVP is a flexible PVC extrusion, PVC is particularly suitable for a wide range of applications due to its excellent chemical resistance.

Installation

1. Clean the installation area thoroughly to remove all dust, debris, and moisture for a secure adhesive bond
2. Measure the expansion gap and cut the flexible PVC profile to the required size
3. Apply a high-quality contact adhesive or high-bond flooring tape to both the subfloor substrate and the underside of the profile
4. Position the cover evenly over the gap and press it down firmly with a hand roller to eliminate air pockets and guarantee a strong bond
5. Join the adjacent resilient vinyl flooring to the sides of the cover joint by hot welding them together using a standard weld rod

Maintenance

Daily

Regular maintenance will prevent the buildup of dirt and grease. Under no circumstances should degreasers of any type be used on this profile. Similarly floor cleaners/ sanitisers which contain hydrocarbons or citrus based agents should not be used. Floor sealants, polishes should not under any circumstances be applied to PVC, the use of such aggressive detergents could result in colour fade within the PVC. Daily Brush down the profile using a soft bristled brush and remove any dust by wiping with a damp cloth.

Twice weekly or as required

Brush down the profile using a soft bristled brush with clean, warm water, containing the correct dilution ratio of a ph neutral cleaning solution. Then apply a small amount to a wet green scotch pad and gently clean the surface in a left to right motion. During the cleaning process, the water must be changed on a regular basis. Do not soak the profile. Once the profile has been cleaned thoroughly rinse with fresh, clean water and dry with a dry lint free cloth. Stubborn marks such as boot blacking may be removed by rubbing with of a green scotch pad and neutral detergent. After cleaning, dry thoroughly with a lint free cloth. Due to the physical properties of the PVC material, we strongly recommend that the green pad is changed regularly.

On completion the profile should be completely dry.